


818XC-0010
818XC-0011
818XC-0030
818XC-0033

Установка системы аварийного питания
Installation manual of power battery device

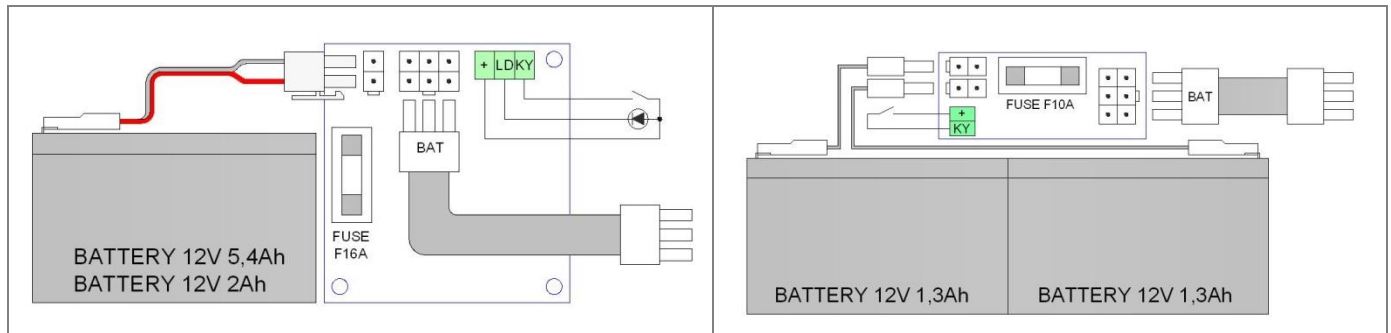

EN

INSTALLATION OF BATTERY POWER DEVICE

- 1 Fix the battery power device on the drive unit profile by front hooking, or using the supplied screws.
 2. Connect the battery power device to the BAT connector of the electronic control, using the supplied cable.
 3. Ensure that the battery is connected to the electronic board.
 4. Connect the automation to the power supply and wait at least 30 minutes to let the battery recharge. Make sure that removing the power supply, the door is working with battery power device, in mode choice using the BTMD menu.
- Note: to allow recharging, the battery power device must always be connected to the electronic control. In case of long periods of inactivity of the automatic door, disconnect the battery from the electronic board.
5. In the absence of mains power, battery operation is disabled when the charge level of the battery is too low.
- If desired, you can connect a N.O. contact to reactivate the battery operation (example a key switch) between the terminals [+] and [KY] as shown in Figure.
6. If desired, you can connect a LED to signal the presence of the battery (not supplied) between the terminals [+] and [LD] as shown in the figure. In the presence of mains power, the LED makes a blink every 10 seconds, while in the absence of mains power, the LED remains lit.

ky

- 1 Закрепите устройство аварийного питания на профиле привода с помощью переднего зацепления или с помощью прилагаемых винтов.
 2. Подключите устройство к разъему BAT платы управления автоматикой, используя прилагаемый кабель.
 3. Убедитесь, что аккумулятор(ы) подключен(ы) к электронной плате.
 4. Подключите автоматику к источнику питания и подождите не менее 30 минут, чтобы зарядить аккумулятор(ы). Удостоверьтесь, что при отключении электропитания, автоматика работает в режиме выбора с помощью меню BTMD.
- Примечание: для обеспечения подзарядки аккумулятора(ов) система аварийного питания всегда должна быть подключена к плате управления. В случае длительного периода бездействия автоматической двери отсоедините аккумулятор(ы) от электронной платы управления.
5. При отсутствии сетевого электропитания работа батареи отключается, когда уровень заряда аккумулятора слишком низкий. При желании вы можете подключить кнопку с N.O. контактом для принудительного включения аккумулятора(ов) между клеммами [+] и [KY], как показано на рисунке.
 6. При желании вы можете подключить светодиод (не прилагается) между клеммами [+] и [LD], чтобы сигнализировать работу автоматики от системы аварийного питания, как показано на рисунке. При наличии сетевого напряжения светодиод мигает каждые 10 секунд, а при отсутствии сетевого напряжения светодиод горит постоянно.
 7. Характеристики:
Ток заряда - 0,5 А
Зарядное напряжение - 27,6 В / 13,8 В (зависит от типа устройства)
Потребление в режиме ожидания - 0,5 Вт.

CAME S.P.A. Via Martiri Della Libertà, 15 – 31030 Dosson di Casier – Treviso – Italy